
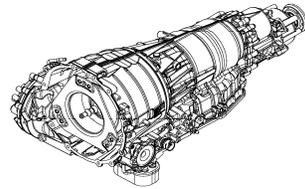
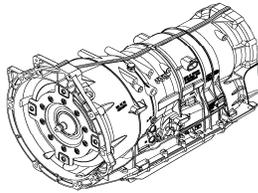


ZF 6HP26X / 6HP28X

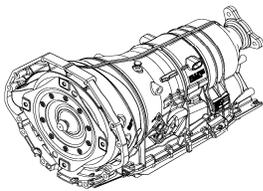

6HP26X
6HP28X

Automatic Transmission Spare Parts Catalog

Warranty Information

Warranty coverage for ZF passenger car transmission spare parts and kits covers the first 12 months after installation in the vehicle, or 24 months after purchase from ZF Services.

Warranty of the product is limited to replacement or repair, if found to be defective in ZF material or workmanship, and specifically does not cover removal, reinstallation, or any costs incidental to the repair of the vehicle, or any kind of consequential damages.

All warranty and/or non-warranty returns must be approved.

Disclaimer

The specifications and information shown in this catalog have been compiled from accepted and reliable sources and is believed to be accurate at the time of publication. While ZF Services believes this information is correct, no guarantee or warranty is made as to the accuracy of the information and ZF Services cannot and does not accept or assume any responsibilities for errors, omissions, or consequential harm or damages. Replacement parts should not be used when they do not appear to fit. ZF Services disclaims all liability and responsibility for any harm resulting from any such modifications.

Copyright

Printed in USA - Copyright © 2008 ZF Services

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of ZF Services.

Distributed By

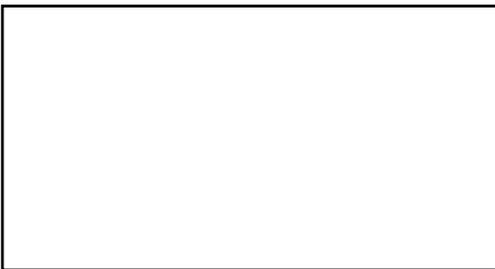




Table of Contents

6HP26X / 6HP28X

Technical Information

Torque, Gear Ratio & Weight	2
Oil Capacity	2
6HP26X / 6HP28X Lubricants	2
6HP26X / 6HP28X Technical Literature	2
6HP26X / 6HP28X General Transmission Oil Filling Procedure	3 - 7
How To Use This Catalog	8
Type Plate Information	9

6HP26X 1068 020 XXX / 6HP28X 1068 050 XXX**Spare Parts**

Gearbox Housing Group	10
Torque Converter Group	11
Oil Supply Group	12
Front Planetary Group	13
Rear Planetary Group	14
Coupling A Group	15
Coupling B Group	16
Coupling C Group	17
Coupling D Group	18
Coupling E Group	19
Output Group	20
Filter Group	
Filter General	21
Filter BMW	22
Filter Ford	23
Mechatronic Group	24
Gear Shift System E-Shift Group	25
Gear Shift System M-Shift Group	
M-Shift BMW	26
M-Shift BMW	27
M-Shift LAND ROVER	28
M-Shift Ford	29
Parking Lock Group	30

Selective Shims, Snap Rings, Steel Plate & Kits Content

Selective Shims	31
Selective Snap Rings	32 - 33
Selective Steel Plate	34
Kits Content	35 - 40



Technical Information

Torque, Gear Ratio & Weight

Input Torque	1 Gear	2 Gear	3 Gear	4 Gear	5 Gear	6 Gear	Rev Gear	Drive	Weight (incl. oil)
326 ftlbs to 444 ftlbs (model specific)	4.17	2.34	1.52	1.14	0.87	0.69	3.40	RWD	~196 lbs.

Oil Capacity

9.4 liters (10 Quarts) + 0.5 liter (0.53 Quarts) for cooling system

6HP26X / 6HP28X Lubricants

Amount	ZF Part #	Oil Grade
1 Liter Bottle	S671 090 255	ZF LifeGuardFluid 6
20 Liter Canister	S671 090 253	ZF LifeGuardFluid 6
209 Liter Drum	S671 090 252	ZF LifeGuardFluid 6

Note: ZF recommends the use of LifeGuardFluid 6 for optimal performance.


6HP26X / 6HP28X Technical Literature

Language	ZF Part #	Description
English	1068 751 702	6HP26X / 6HP28X REPAIR MANUAL (CD)
English	1068 766 701	6HP26X / 6HP28X FUNCTIONAL DESCRIPTION - BMW (CD)
English	1068 766 704	6HP26X / 6HP28X FUNCTIONAL DESCRIPTION - AUDI (CD)




6HP26X / 6HP28X General Transmission Oil Filling Procedure

**Adding oil to 6HP26X / 6HP28X automatic transmission
- general - up to overflow at 40 °C**

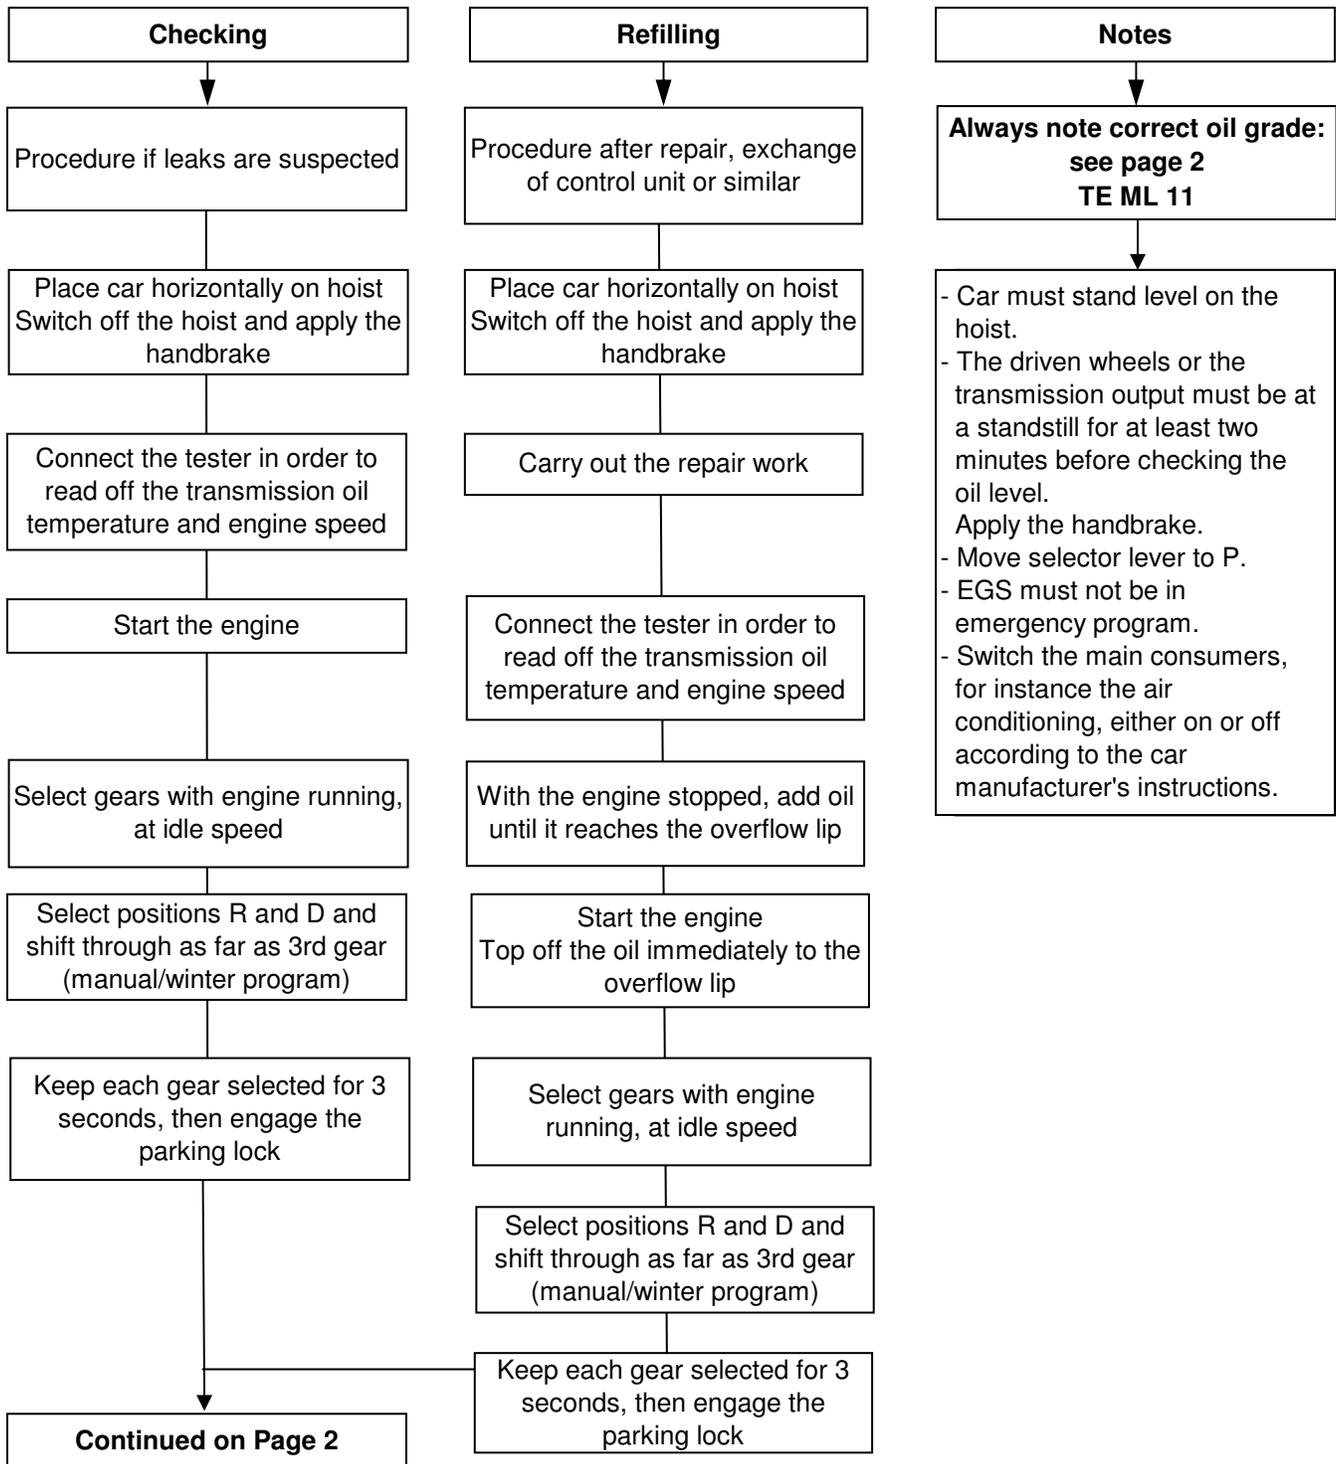




6HP26X / 6HP28X General Transmission Oil Filling Procedure (continued)

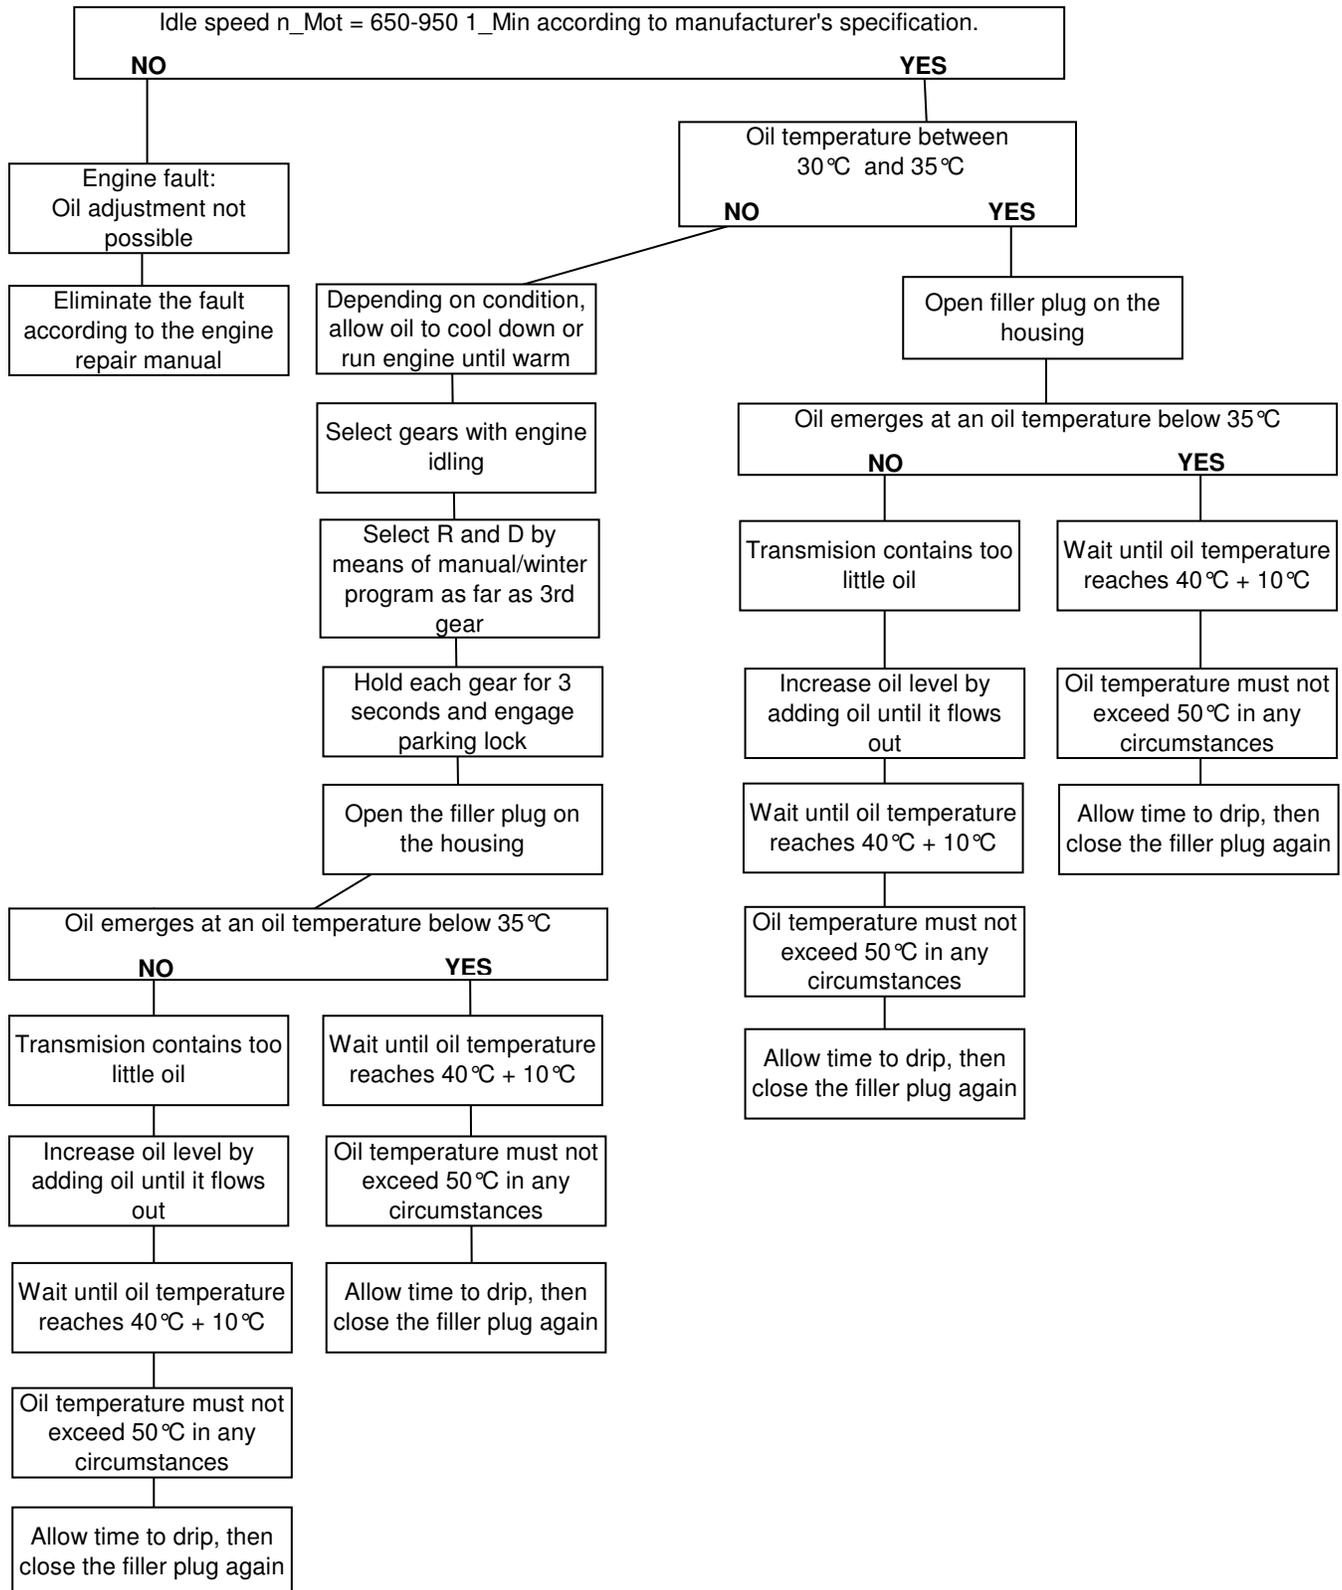




6HP26X / 6HP28X General Transmission Oil Filling Procedure (continued)

Oil service 6HP26X / 6HP28X BMW

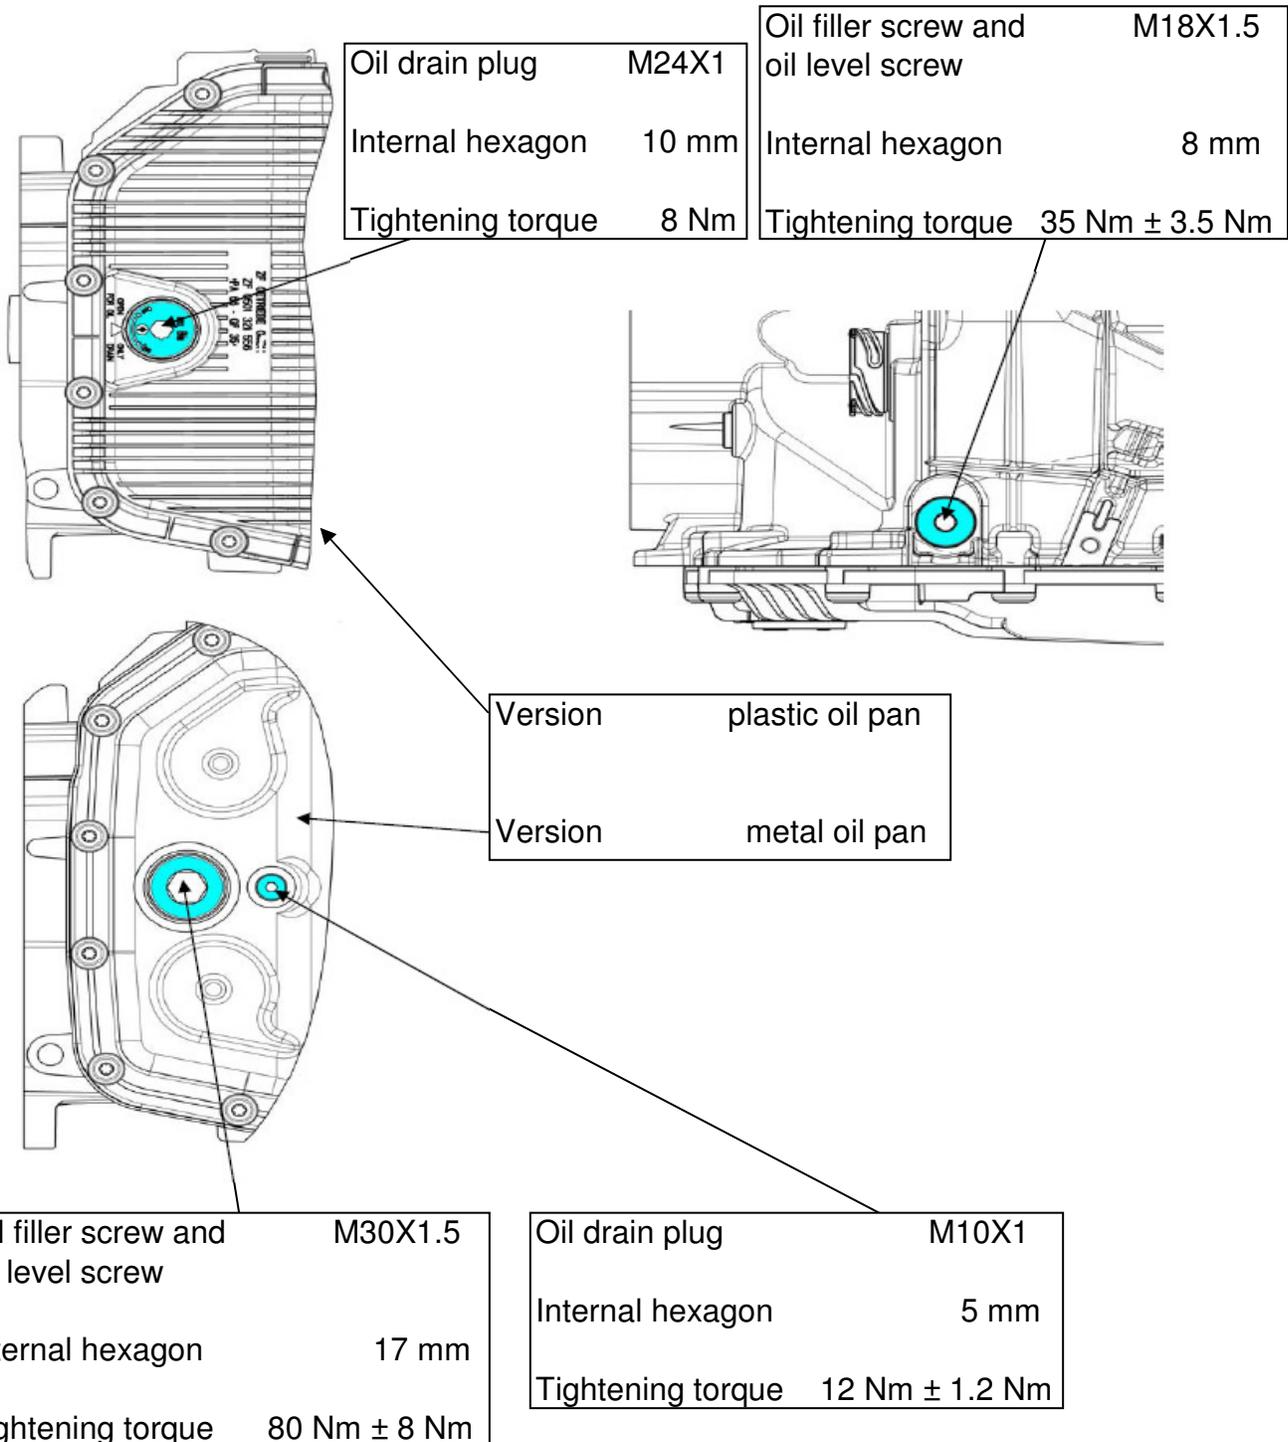

6HP26X / 6HP28X General Transmission Oil Filling Procedure (continued)

Oil service 6HP26X / 6HP28X Ford

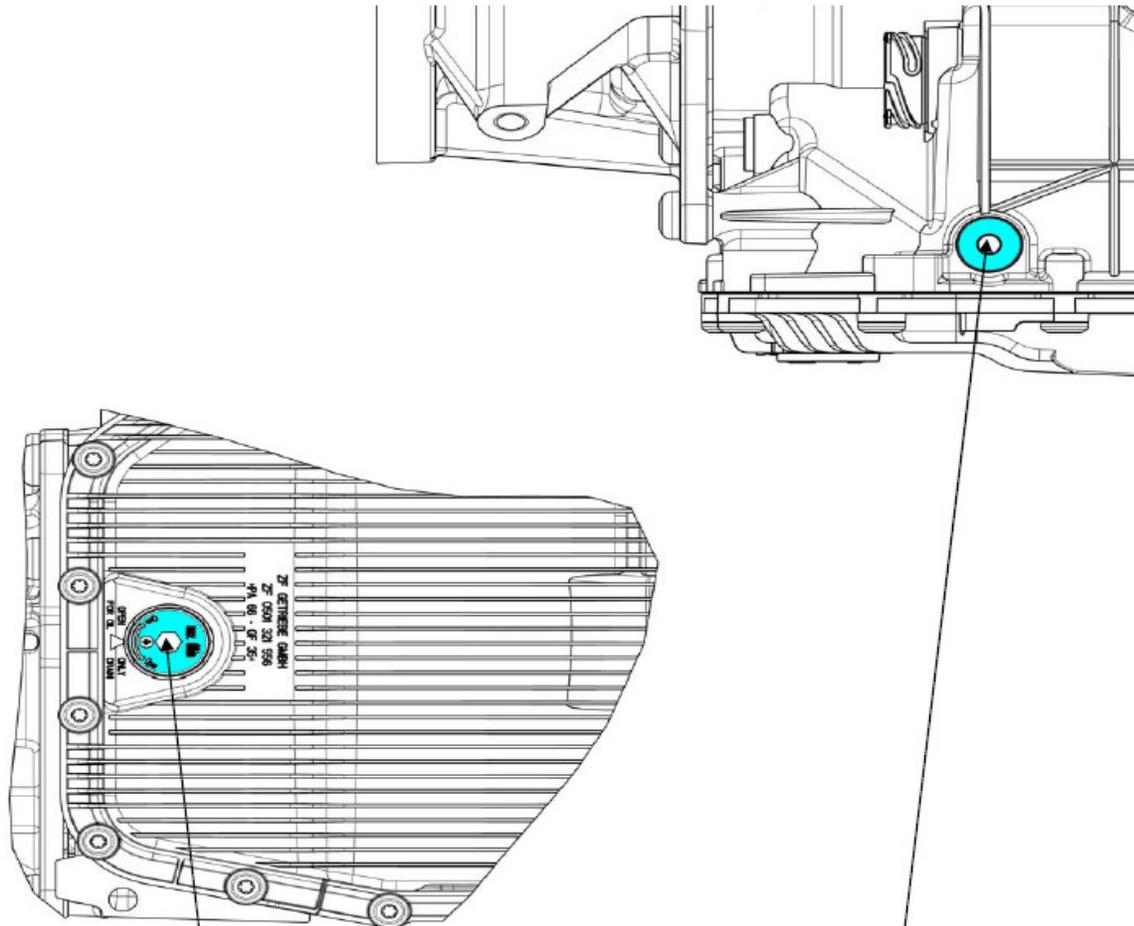


Oil drain plug	M24X1
Internal hexagon	10 mm
Tightening torque	8 Nm

Oil filler screw and oil level screw	M18X1.5
Internal hexagon	8 mm
Tightening torque	35 Nm ± 3.5 Nm

6HP26X / 6HP28X General Transmission Oil Filling Procedure (continued)

Oil service 6HP26X / 6HP28X LAND ROVER

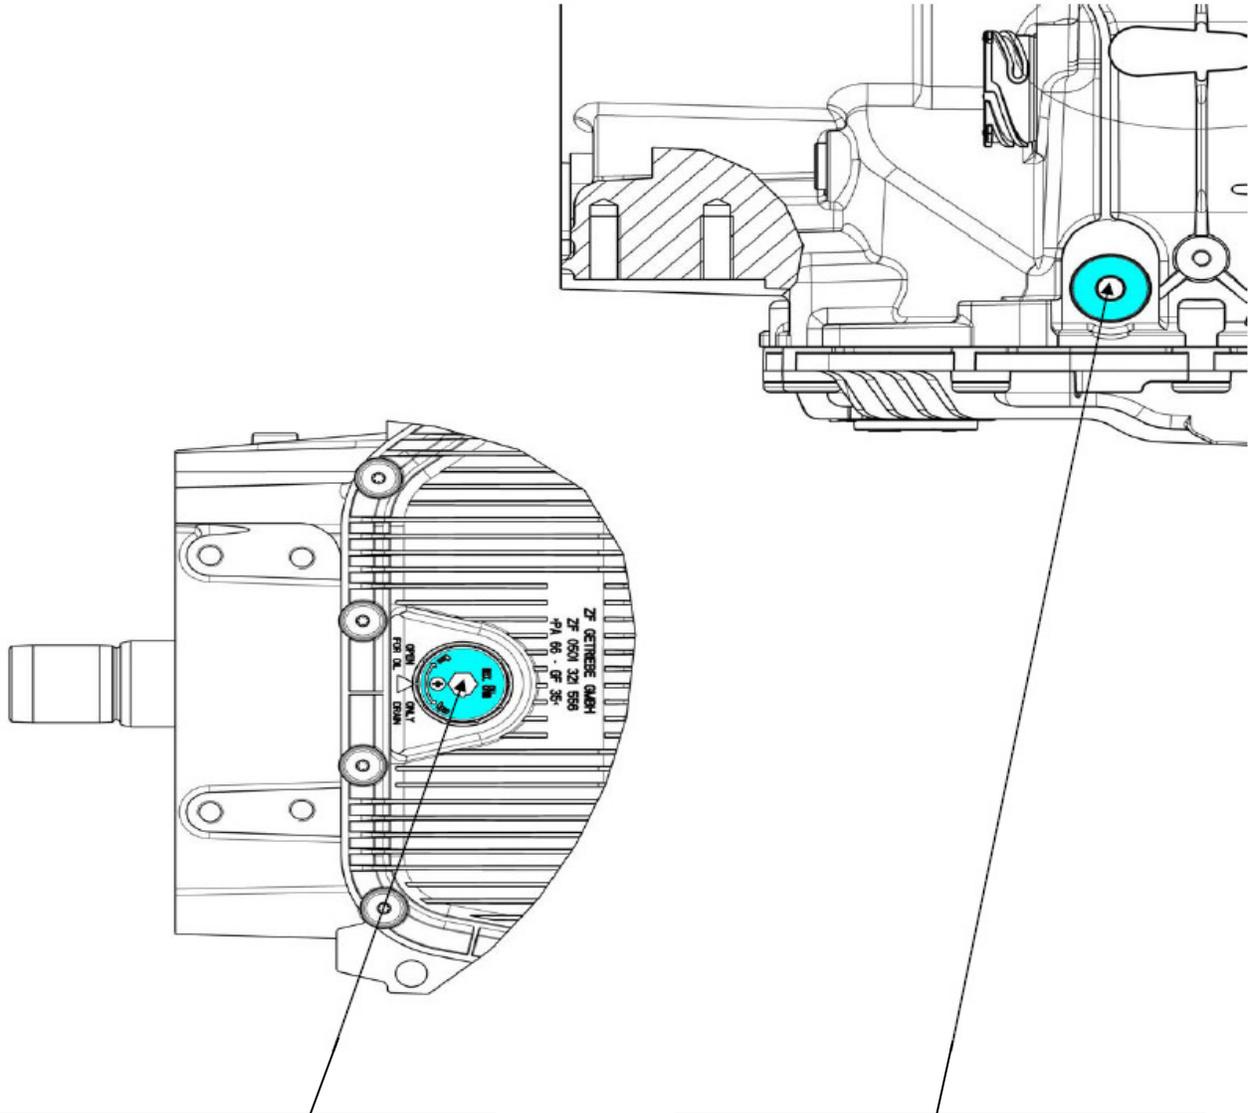

Oil drain plug	M24X1
Internal hexagon	10 mm
Tightening torque	8 Nm

Oil filler screw and oil level screw	M18X1.5
Internal hexagon	8 mm
Tightening torque	35 Nm ± 3.5 Nm



How To Use This Catalog

Table of Contents

Each transmission group of this catalog is listed in the table of contents. This spare parts catalog includes only transmission specification numbers for North American applications.

Technical Information

All technical information is specific to the transmission models that are referenced in this catalog. Weight and oil capacity information are only approximate and may vary by actual transmission specification. For any technical inquiry, please contact your preferred ZF passenger car transmission distributor for assistance. For a list of technical literature available from ZF or for answers to frequently asked questions about ZF transmissions visit us at www.zf.com/na.

Spare Parts

Each transmission is divide into groups (e.g. gearbox housing group). The position number (**Position #**) is used to identify the location of each spare part in the transmission. A position number like 01.010 is either a spare part or an assembly. A position number like 01.010/110 is a subcomponent of an assembly. Please contact your preferred ZF passenger car transmission distributor about availability of assemblies and subcomponents.

Contact ZF for the most updated part number (for example: 6HP19 1071 040 XXX). Please, have the position number and model number prepared when you call. Thank you.

Use our toll free Service-Hotline: 1-800-451-2595.

The description (**Description**) identifies the spare part.

The quantity (**Quantity**) is the amount of spare parts included in one transmission model for a certain position number. The quantity may vary depending on the transmission specification and certain spare parts may be used in multiple positions in the transmission.

The notes column (**Notes**) gives more information about the spare part (e.g. included in a kit).

Example

OIL SUPPLY GROUP

Position #	Description	Quantity	Notes
10.010	PUMP	1	
10.010/150	NEEDLE SLEEVE	1	
10.090	SHIM	1	Selective shim; see page 31.

Selective Shims, Snap Rings, Steel Plate & Kits Content


Each list for selective shims, snap rings or steel plate is listed in this section of the catalog. Please measure the clearance according to the repair manual and select the required spare part from the table.

The kits content section shows all available kits for the transmission models that are referenced in this catalog, including the content of each kit.

Mechatronic and Valve Body are only available as complete Service-Mechatronic.

Type Plate Information

The type plate is located on the main housing of the transmission. Please refer to the ZF transmission specification # when searching for spare parts and kits in this catalog.

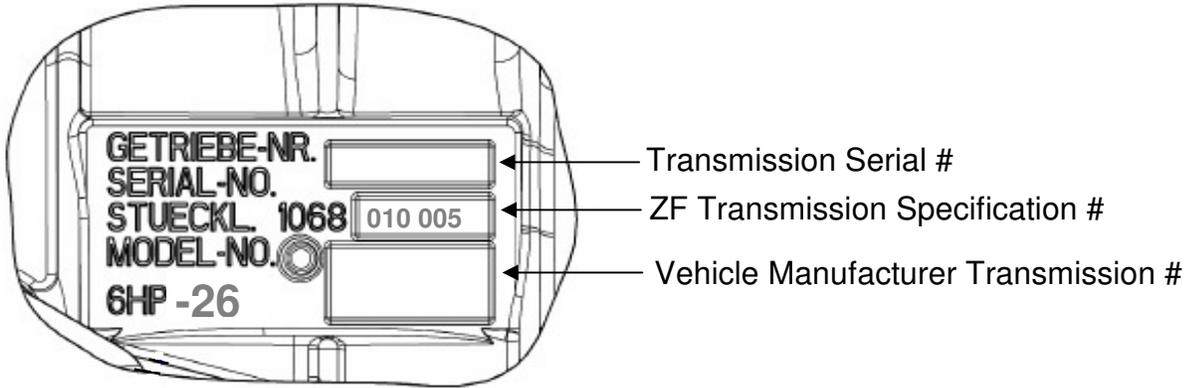




6HP26X 1068 020 XXX / 6HP28X 1068 050 XXX

GEARBOX HOUSING GROUP


Position #	Description	Quantity	Notes
01.010	GEARBOX HOUSING	1	
01.050	SEALING SLEEVE	2	Included in overhaul kit; see page 39.
01.060	SEALING SLEEVE	1	Included in overhaul kit; see page 39.
01.064	SEALING SLEEVE	1	Included in overhaul kit; see page 39.
01.070	BREATHER TUBE	1	
01.100	SCREW PLUG	1	Included in overhaul kit; see page 39.
01.140	SCREW PLUG	1	
01.220	PLUG	1	Included in overhaul kit; see page 39.
01.280	PLUG	1	

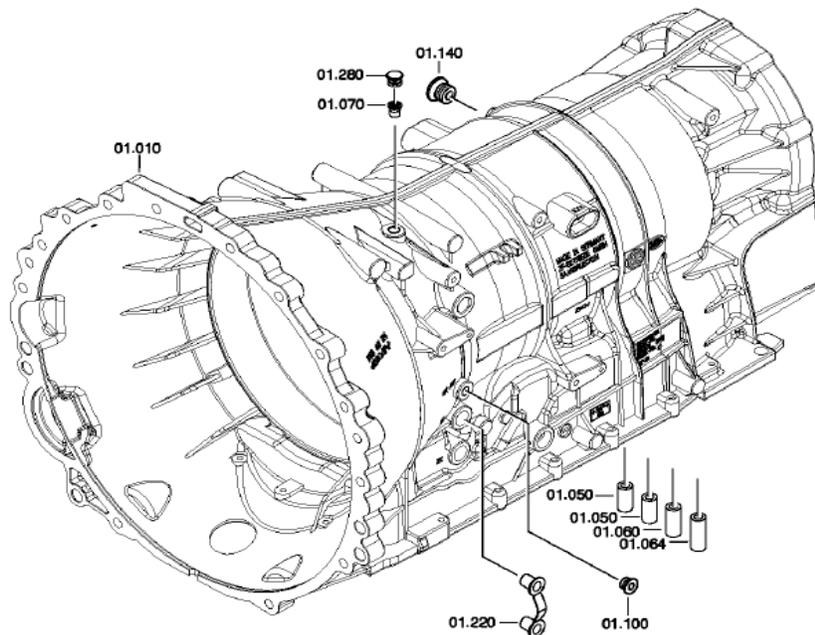



TORQUE CONVERTER GROUP


Position #	Description	Quantity	Notes
22.010	CONVERTER	1	

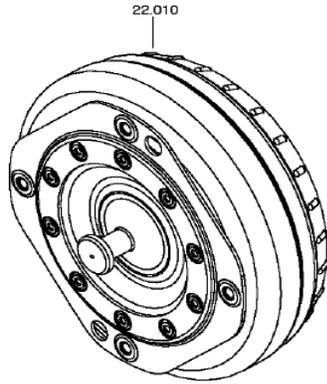



OIL SUPPLY GROUP


Position #	Description	Quantity	Notes
10.010	PUMP ASSEMBLY	1	
10.010/150	NEEDLE SLEEVE	1	
10.010/160	SNAP RING	1	
10.010/170	SHAFT SEAL	1	Included in overhaul kit; see page 39.
10.020	ROUND SEALING RING	1	Included in overhaul kit; see page 39.
10.040	INTERMEDIATE PLATE ASSEMBLY	1	
10.040/110	INTERMEDIATE PLATE	1	
10.040/130	CENTERING PLATE	1	
10.040/150	COUNTER SCREW	6	M6X28
10.040/160	PISTON RING	1	Included in overhaul kit; see page 39.
10.040/170	PISTON RING	1	Included in overhaul kit; see page 39.
10.040/180	COUNTER SCREW	4	M6X28
10.050	COUNTER SCREW	11	M6X46
10.070	ROUND SEALING RING	1	Included in overhaul kit; see page 39.
10.080	TORX SCREW WITH USIT RING	13	
10.084	TORX SCREW WITH USIT RING	14	Included in overhaul kit; see page 39.
10.090	SHIM	1	Selective shim; see page 31.

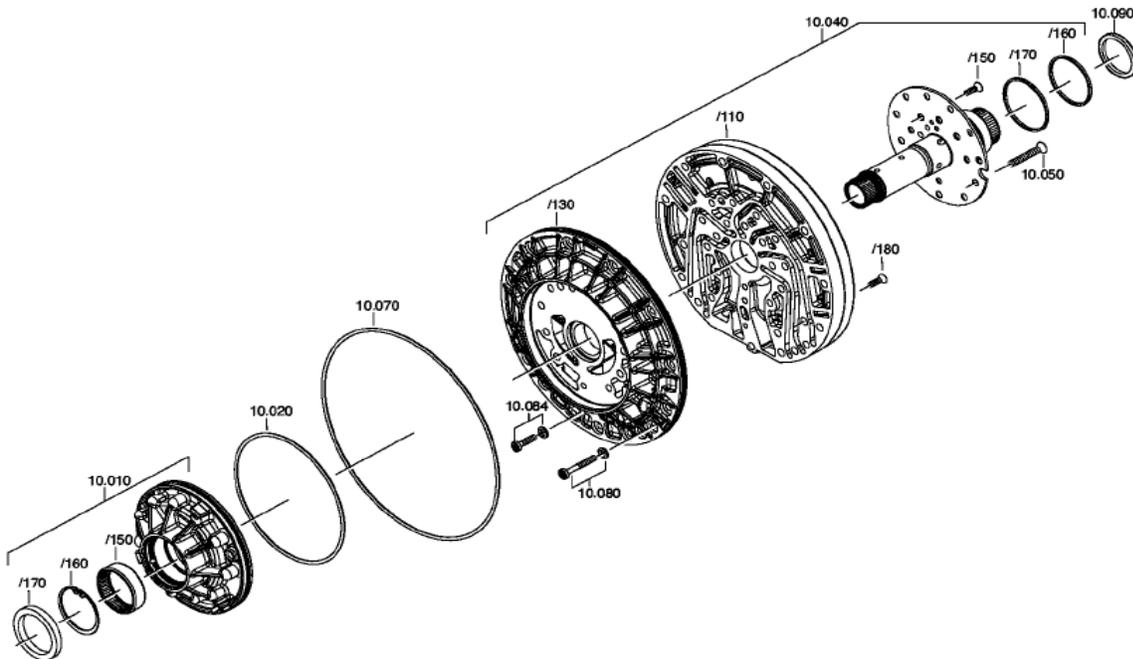




FRONT PLANETARY DRIVE GROUP

Position #	Description	Quantity	Notes
32.010	PLANETARY ASSEMBLY	1	
32.010/200	AXIAL NEEDLE BEARING	1	
32.010/210	SUN GEAR	1	
32.010/220	SNAP RING	1	
32.100	AXIAL NEEDLE BEARING	1	
32.200	OIL TRAY	1	

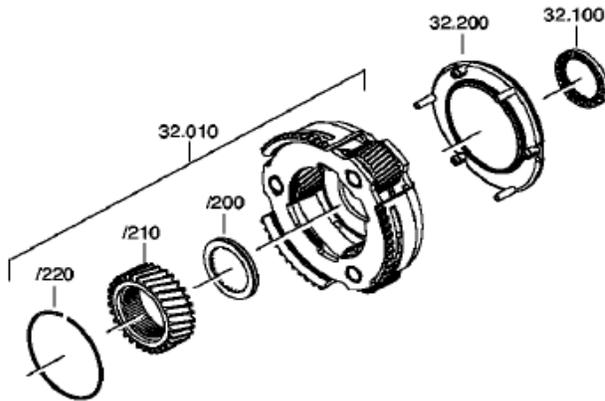

REAR PLANETARY DRIVE GROUP


Position #	Description	Quantity	Notes
42.010	PLANET ASSEMBLY	1	
42.010/250	AXIAL WASHER	1	1.00 mm
42.010/260	AXIAL NEEDLE BEARING	1	
42.010/280	AXIAL NEEDLE BEARING	1	
42.010/290	AXIAL WASHER	1	3.20 mm
42.010/310	AXIAL WASHER	1	
42.170	RING GEAR	1	
42.180	SNAP RING	1	
42.190	OUTPUT SHAFT	1	
42.200	AXIAL WASHER	1	1.00 mm
42.210	AXIAL NEEDLE BEARING	1	

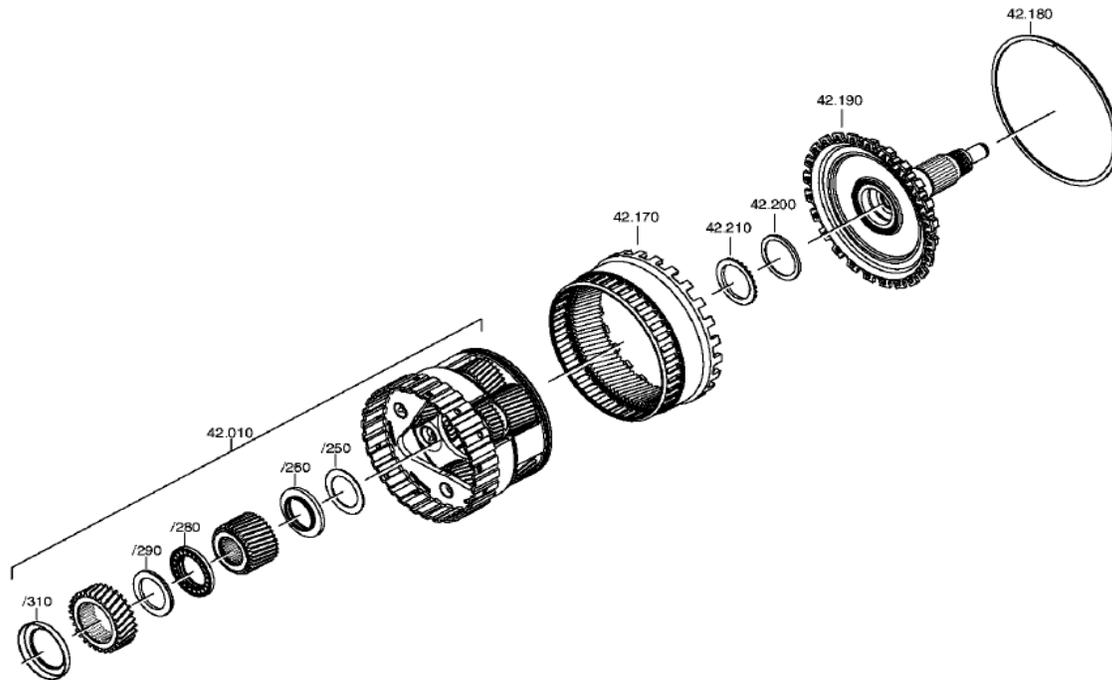



COUPLING A GROUP


Position #	Description	Quantity	Notes
70.010	CYLINDER	1	
70.030	PISTON	1	
70.040	ROUND SEALING RING	1	Included in overhaul kit; see page 39.
70.050	ROUND SEALING RING	1	Included in overhaul kit; see page 39.
70.060	CUP SPRING	1	
70.080	OIL DAM	1	
70.090	ROUND SEALING RING	1	Included in overhaul kit; see page 39.
70.100	K-RING	1	
70.130	UNDULATING SPRING	1	
70.140	STEEL PLATE	6	3.00 mm; Included in steel kit; see pages 37 & 38.
70.150	FRICTION PLATE	5	Included in friction kit; see pages 35 & 36.
70.170	SNAP RING	1	Selective snap ring; see page 32.

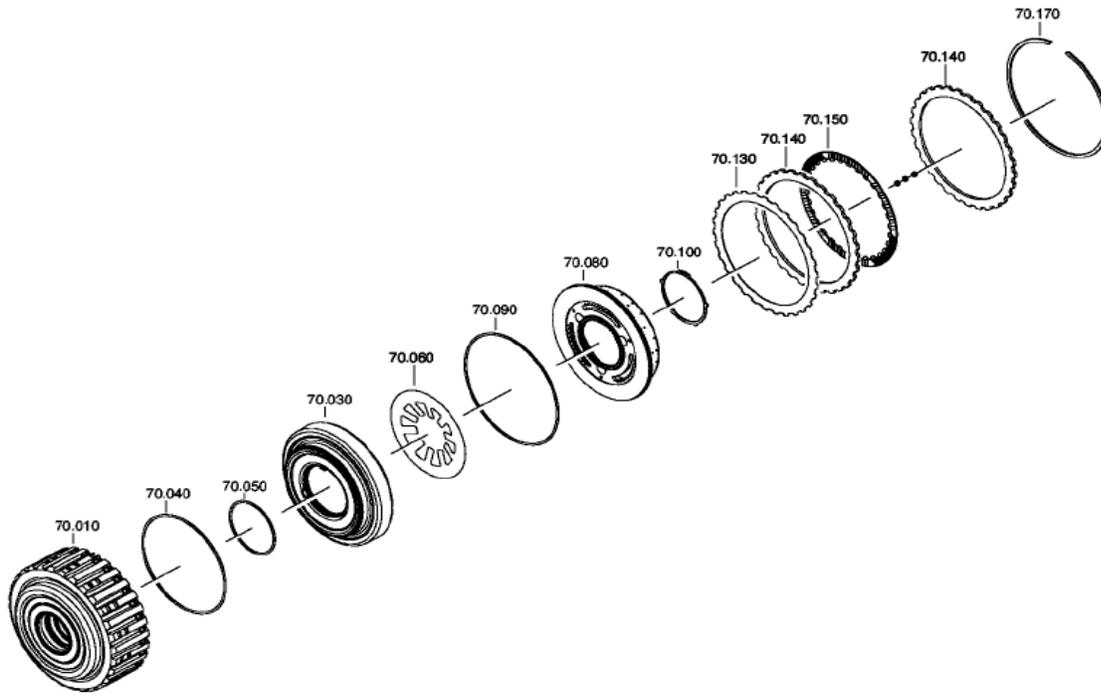



COUPLING B GROUP


Position #	Description	Quantity	Notes
72.010	SUN GEAR SHAFT	1	
72.020	PISTON	1	
72.050	ROUND SEALING RING	1	Included in overhaul kit; see page 39.
72.060	ROUND SEALING RING	1	Included in overhaul kit; see page 39.
72.070	CUP SPRING	1	
72.080	OIL DAM	1	
72.100	ROUND SEALING RING	1	Included in overhaul kit; see page 39.
72.110	SNAP RING	1	2.50 mm
72.120	FIXING WASHER	1	
72.124	SNAP RING	1	1.50 mm
72.130	UNDULATING SPRING	1	
72.140	STEEL PLATE	5	2.10 mm; Included in steel kit; see pages 37 & 38.
72.144	END PLATE	1	Included in steel kit; see pages 37 & 38.
72.150	FRICTION PLATE	5	Included in friction kit; see pages 35 & 36.
72.170	SNAP RING	1	Selective snap ring; see page 32.
72.200	SEALING RING	2	Included in overhaul kit; see page 39.
72.210	AXIAL NEEDLE BEARING	1	
72.300	AXIAL NEEDLE BEARING	1	

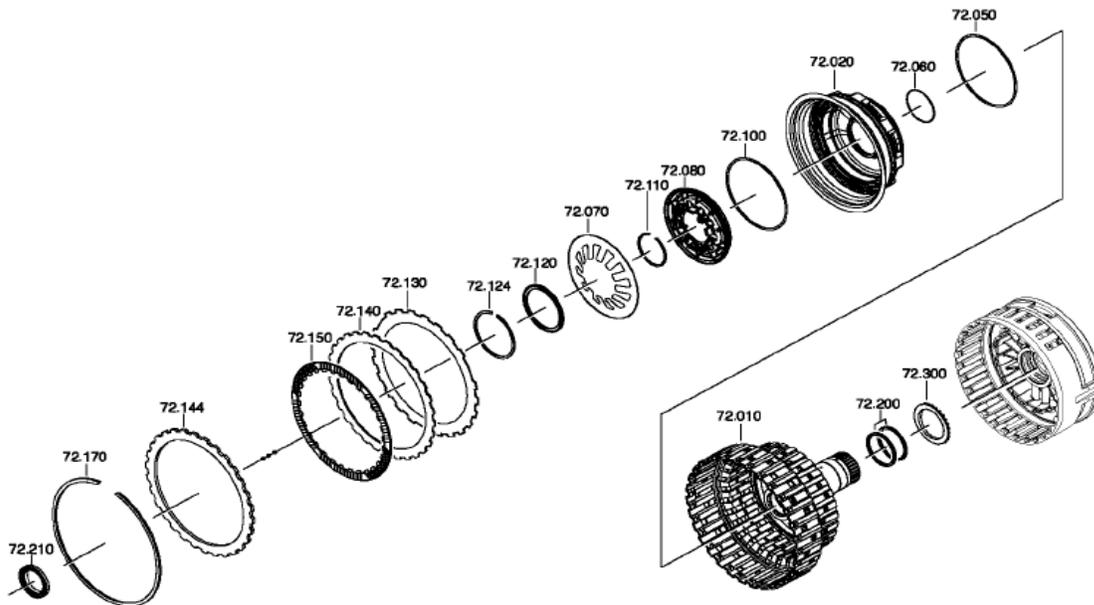



COUPLING C GROUP


Position #	Description	Quantity	Notes
75.010	CYLINDER	1	
75.010/140	FITTING KEY	2	
75.030	PISTON	1	
75.040	ROUND SEALING RING	1	Included in overhaul kit; see page 39.
75.050	ROUND SEALING RING	1	Included in overhaul kit; see page 39.
75.070	CUP SPRING	1	
75.080	STOP-RING	1	
75.084	SNAP RING	1	2.00 mm
75.100	UNDULATING SPRING	1	
75.120	FRICTION PLATE	5	Included in friction kit; see pages 35 & 36.
75.140	STEEL PLATE	5	3.00 mm; Included in steel kit; see pages 37 & 38.
75.160	END PLATE	1	3.90 mm; Included in steel kit; see pages 37 & 38.
75.180	SNAP RING	1	Selective snap ring; see page 32.
75.200	ANGLE DISC	1	
75.240	AXIAL NEEDLE BEARING	1	

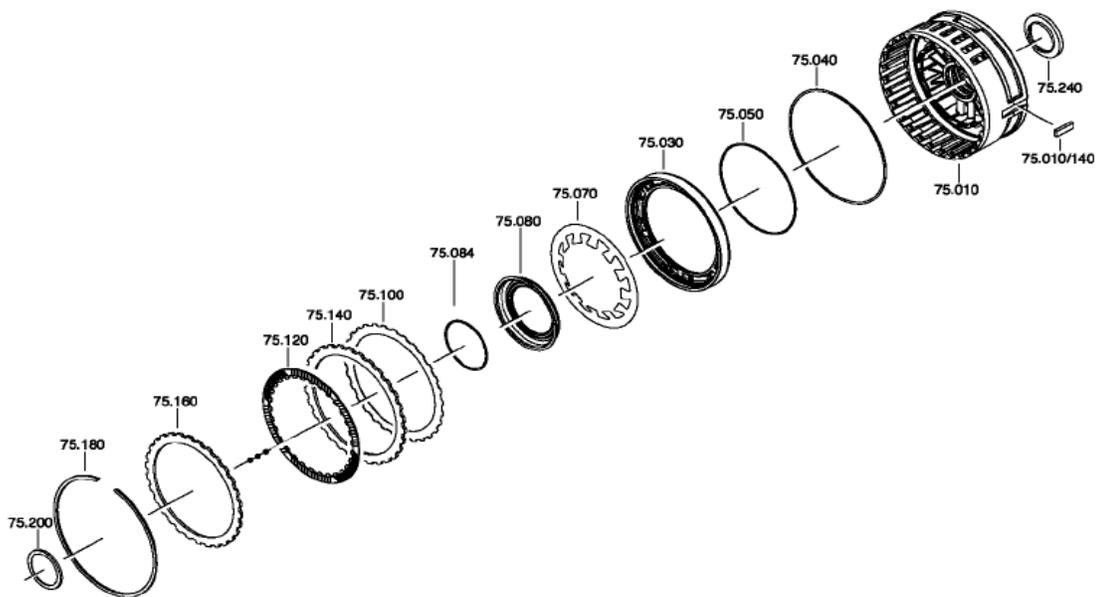




COUPLING D GROUP

Position #	Description	Quantity	Notes
73.010	PISTON	1	
73.020	ROUND SEALING RING	1	Included in overhaul kit; see page 39.
73.030	ROUND SEALING RING	1	Included in overhaul kit; see page 39.
73.060	OIL DAM	1	
73.070	ROUND SEALING RING	1	Included in overhaul kit; see page 39.
73.080	ROUND SEALING RING	1	Included in overhaul kit; see page 39.
73.100	SPLIT RING	1	
73.110	SPLIT RING	1	
73.120	CUP SPRING	1	
73.130	SPLIT RING	1	
73.230	UNDULATING SPRING	1	
73.240	STEEL PLATE	6	2.10 mm; Included in steel kit; see pages 37 & 38.
73.250	FRICTION PLATE	6	Included in friction kit; see pages 35 & 36.
73.260	END PLATE	1	Selective end plate; see page 34. Included in steel kit; see pages 37 & 38.

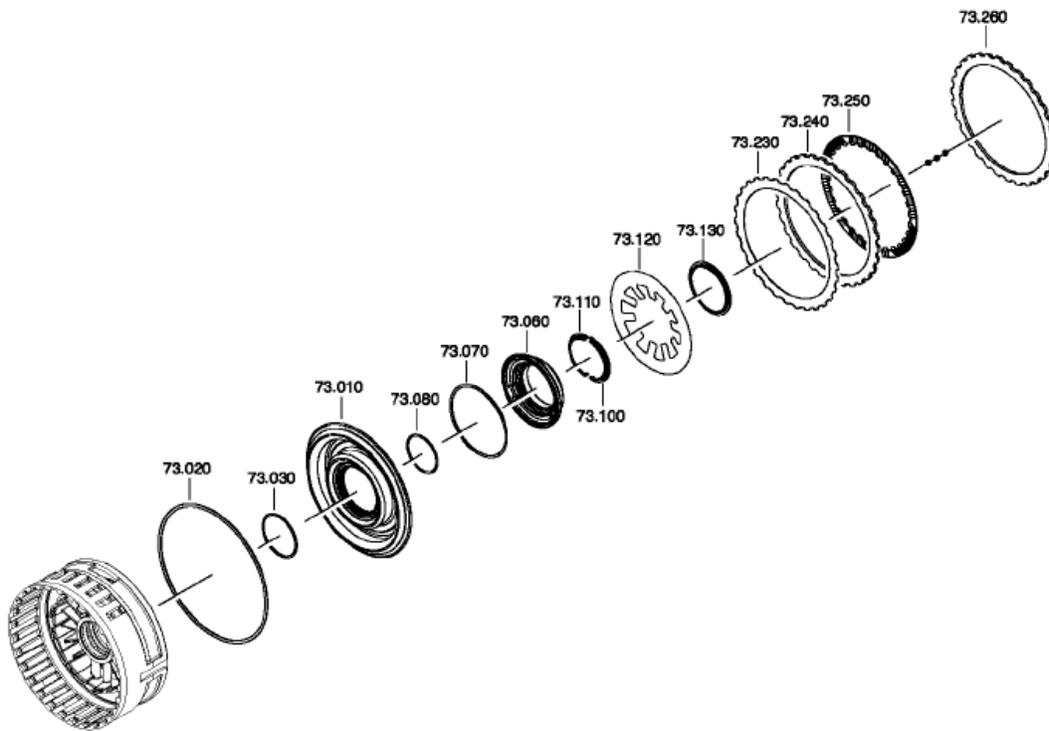

COUPLING E GROUP


Position #	Description	Quantity	Notes
71.010	INPUT SHAFT	1	
71.020	PISTON	1	
71.030	ROUND SEALING RING	1	Included in overhaul kit; see page 39.
71.040	ROUND SEALING RING	1	Included in overhaul kit; see page 39.
71.060	CUP SPRING	1	
71.080	OIL DAM	1	
71.090	ROUND SEALING RING	1	Included in overhaul kit; see page 39.
71.094	FIXING PLATE	1	
71.100	SNAP RING	1	2.50 mm
71.140	UNDULATING SPRING	1	
71.150	STEEL PLATE	7	Included in steel kit; see pages 37 & 38.
71.160	FRICTION PLATE	7	Included in friction kit; see pages 35 & 36.
71.170	END PLATE	1	Included in steel kit; see pages 37 & 38.
71.180	SNAP RING	1	Selective snap ring; see page 33.
71.190	PISTON RING	3	Included in overhaul kit; see page 39.
71.240	SUN GEAR SHAFT	1	
71.260	AXIAL NEEDLE BEARING	1	
71.280	INTERMEDIATE SHAFT	1	
71.290	AXIAL NEEDLE BEARING	1	
71.300	DISC CARRIER	1	
71.310	SNAP RING	1	
71.330	ANGLE DISC	1	

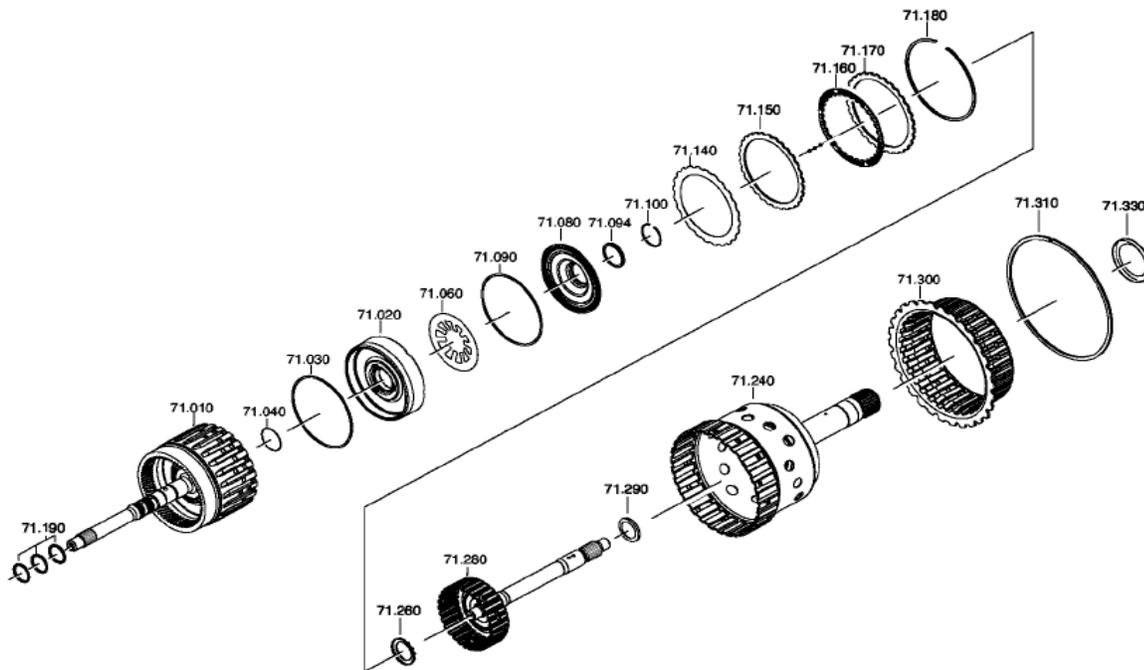



OUTPUT GROUP


Position #	Description	Quantity	Notes
14.020	NEEDLE SLEEVE	1	
14.050	SHIM	1	Selective shim; see page 31.
14.070	AXIAL NEEDLE BEARING	1	
14.080	SUPPORT SHIM	1	
14.090	SNAP RING	1	
14.110	SHAFT SEAL	1	Included in overhaul kit; see page 39.
14.340	PROTECTING CAP	1	

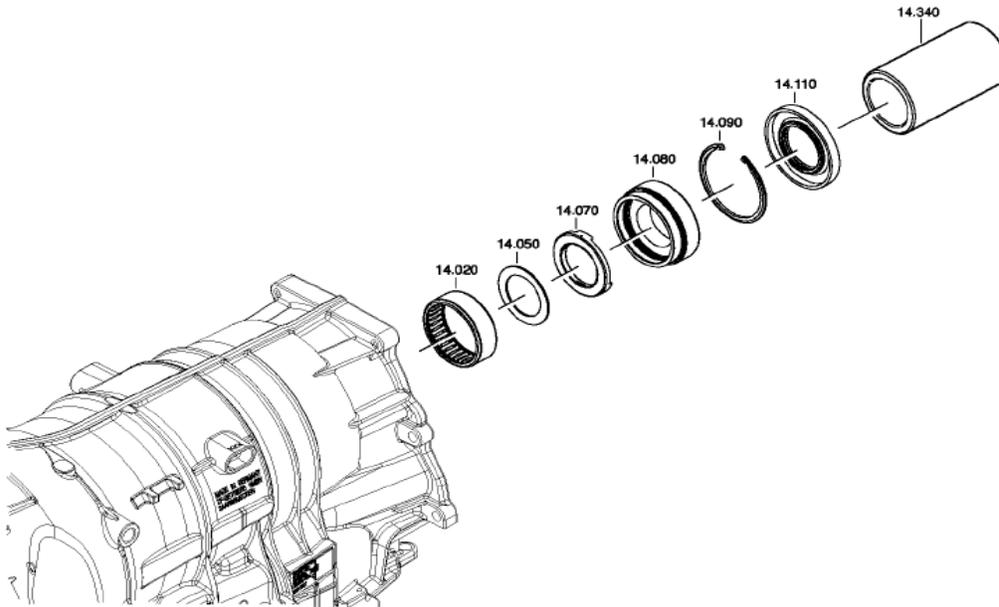



FILTER GROUP GENERAL


Position #	Description	Quantity	Notes
03.010	FILTER	1	Included in filter kit; see page 35.
03.010/014	GASKET	1	Included in overhaul kit; see page 40.
03.010/020	ROUND SEALING RING	1	Included in overhaul kit; see page 40.
03.010/030	SCREW PLUG	1	Included in overhaul kit; see page 40.
03.020	TORX SCREW	21	M6X28.5

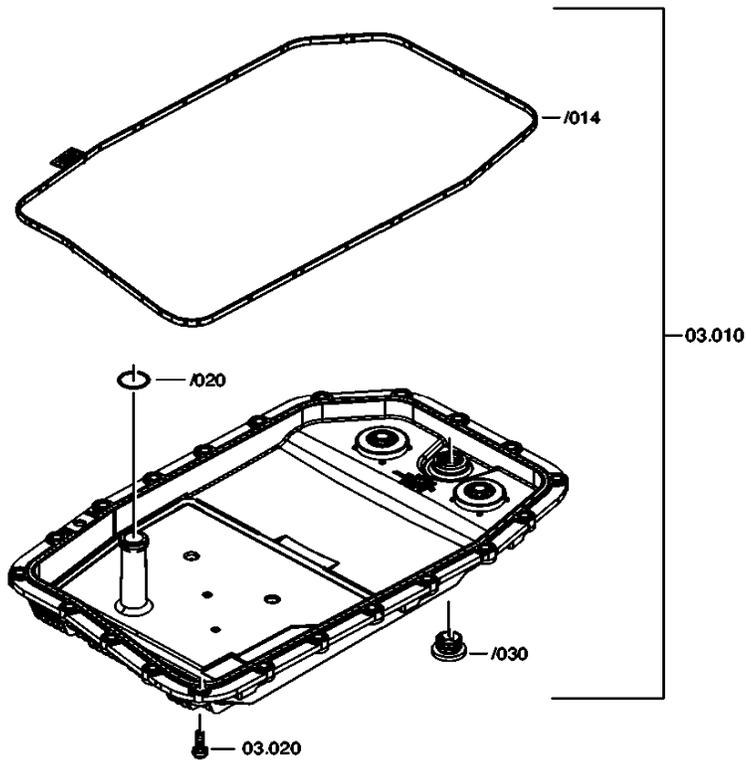




FILTER GROUP BMW

Position #	Description	Quantity	Notes
03.010	PAN ASSEMBLY	1	
03.010/120	SCREW PLUG WITH ROUND SEALING RING	1	M30X1.5
03.010/130	SCREW PLUG	1	M10X1; Included in overhaul kit; see page 40.
03.010/150	MAGNET	2	
03.010/160	CAP	1	
03.020	TORX SCREW	21	M6X22.5
03.030	OIL FILTER	1	
03.030/20	SEALING RING	1	Included in overhaul kit; see page 40.
03.050	GASKET	1	Included in overhaul kit; see page 40.

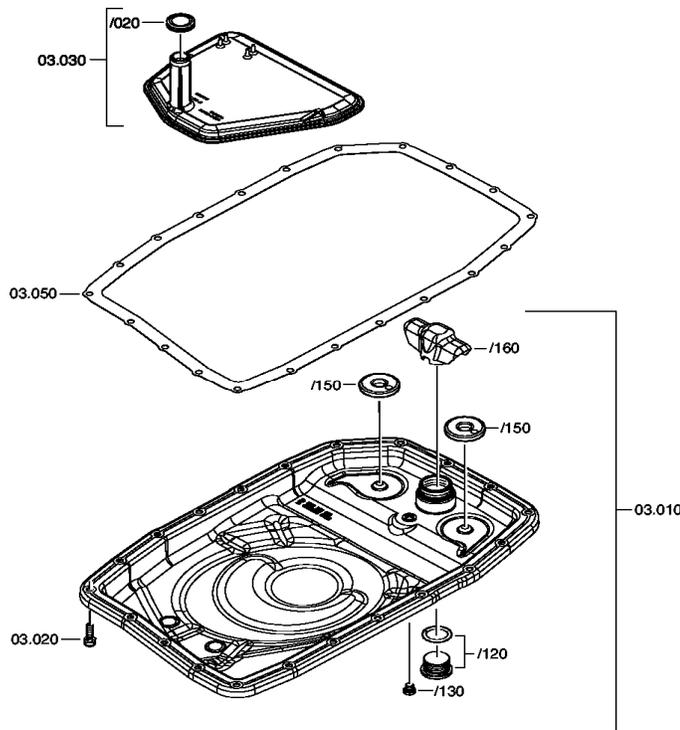

FILTER GROUP Ford



Position #	Description	Quantity	Notes
03.010	FILTER	1	Included in filter kit; see page 35.
03.010/150	MAGNET	2	
03.020	TORX SCREW	21	M6X22.5
03.030	OIL FILTER	1	
03.030/020	SEALING RING	1	Included in overhaul kit; see page 40.
03.050	GASKET	1	Included in overhaul kit; see page 40.

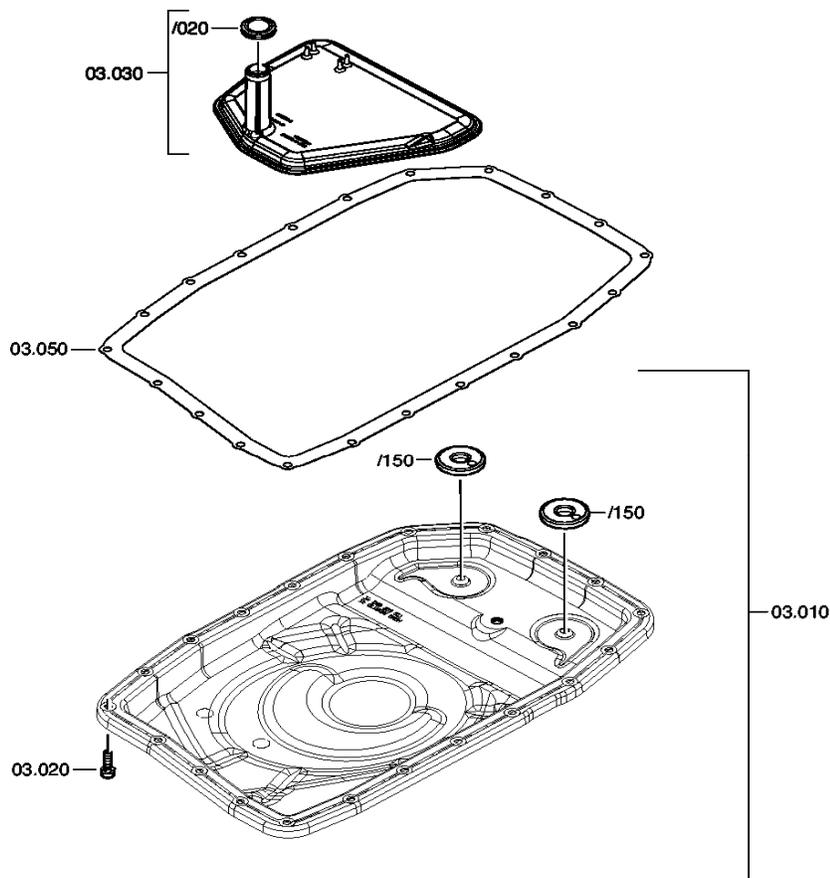



MECHATRONIC GROUP

Position #	Description	Quantity	Notes
27.460/020	GASKET	2	Only available in overhaul kit; see page 40.
27.460/030	GASKET	2	Only available in overhaul kit; see page 40.
27.520	GUIDE SLEEVE	1	Included in overhaul kit; see page 40.
27.700	CAP	1	
27.730	CAPACITOR	1	
27.740	CLAMP	1	
N/A	MECHATRONIC	1	Only complete Service-Mechatronics are available.

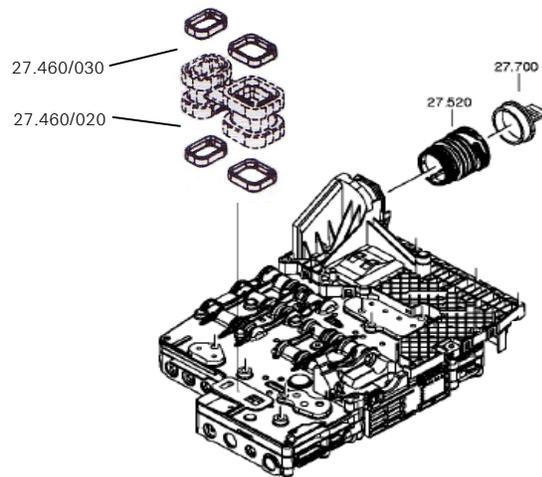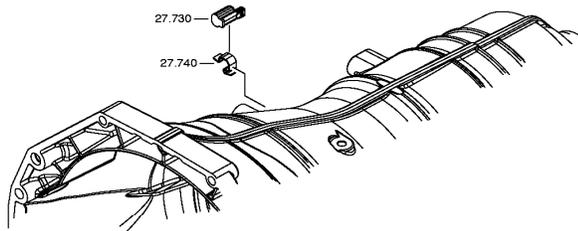


CAUTION!

Only complete Service-Mechatronics are available.

Contact your local ZF Parts distributor for more information.

GEARSHIFT SYSTEM E-SHIFT GROUP


Position #	Description	Quantity	Notes
06.010	SHAFT SEAL	1	10X18X5; Included in overhaul kit; see page 40.
06.030	SELECTOR SHAFT	1	
06.030/110	SELECTOR SHAFT	1	
06.030/120	LEVER	1	
06.030/130	HEXAGON NUT	1	M8X1
06.050	PARKING LOCK DISC	1	
06.060	CLAMPING SLEEVE	1	
06.070	PIPE	1	
06.090	LEG SPRING	1	
06.170	ANGLE BRACKET	1	
06.170/110	ANGLE BRACKET	1	
06.170/120	ANGLE BRACKET	1	
06.170/130	HEXAGON NUT	1	
06.210	CAP SCREW	2	

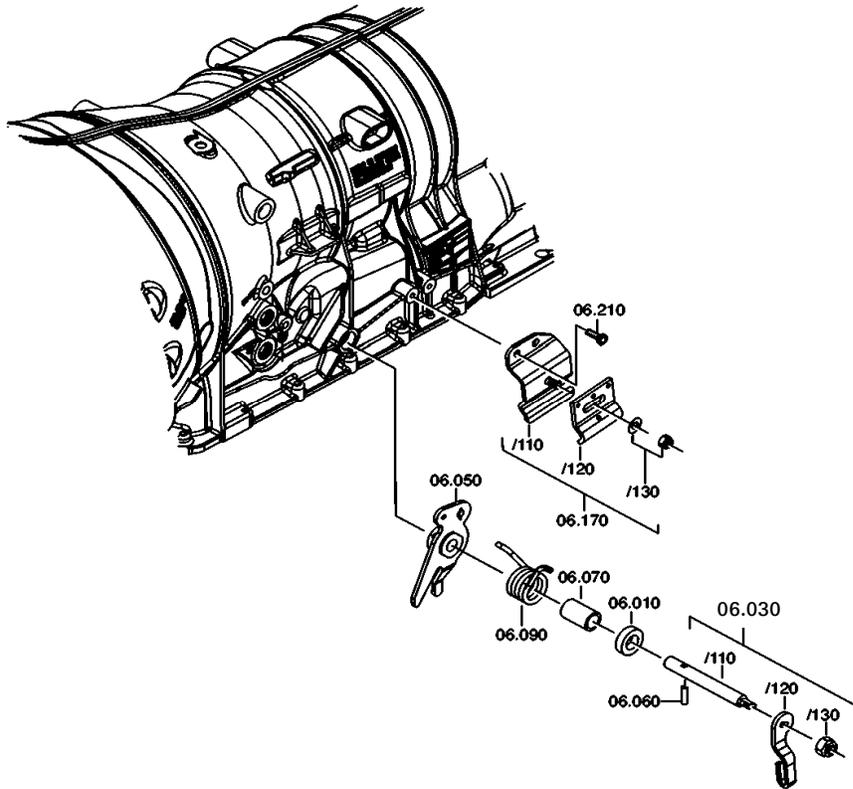



GEARSHIFT SYSTEM M-SHIFT GROUP BMW


Position #	Description	Quantity	Notes
06.010	SHAFT SEAL	2	10X18X5; Included in overhaul kit; see page 40.
06.030	SELECTOR SHAFT	1	
06.030/110	SELECTOR SHAFT	1	
06.030/120	SELECTOR LEVER	1	
06.030/130	HEXAGON NUT	1	M8X1
06.050	ROOSTER COMB	1	
06.060	CLAMPING SLEEVE	1	
06.070	PIPE	1	
06.094	DETENT SPRING	1	
06.100	TORX SCREW	2	M6X13

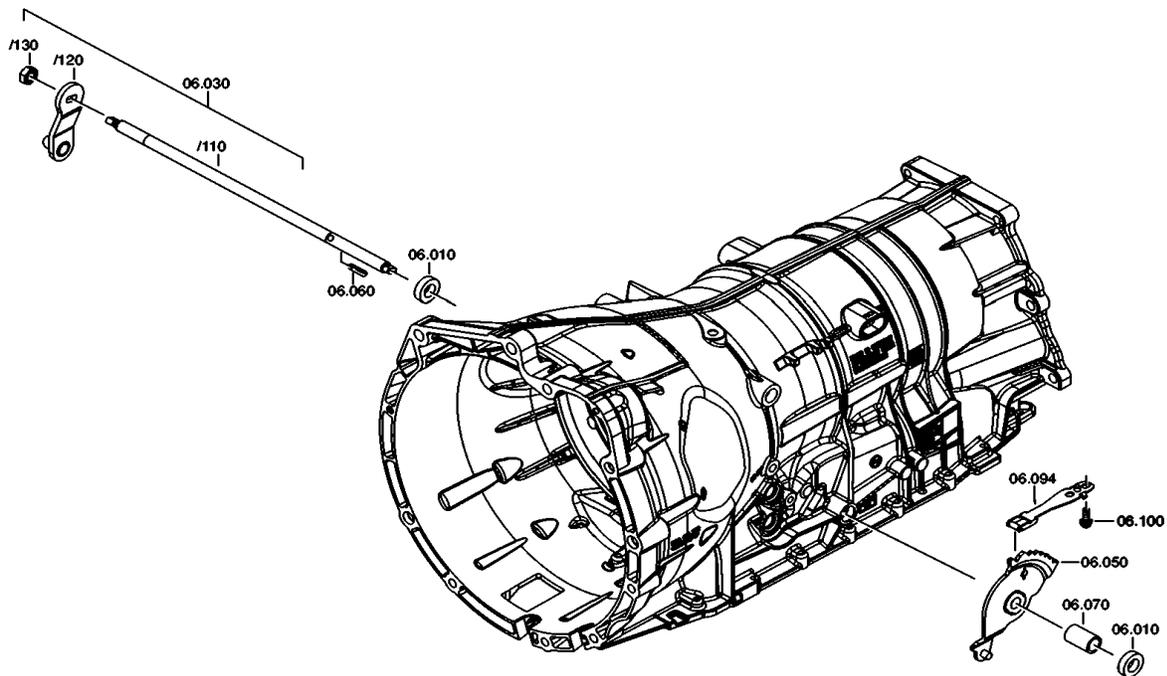



GEARSHIFT SYSTEM M-SHIFT GROUP BMW


Position #	Description	Quantity	Notes
06.010	SHAFT SEAL	1	10X18X5; Included in overhaul kit; see page 40.
06.030	SELECTOR SHAFT	1	
06.050	ROOSTER COMB	1	
06.060	CLAMPING SLEEVE	1	
06.070	PIPE	1	22.50 mm
06.094	DETENT SPRING	1	
06.100	TORX SCREW	2	M6X13

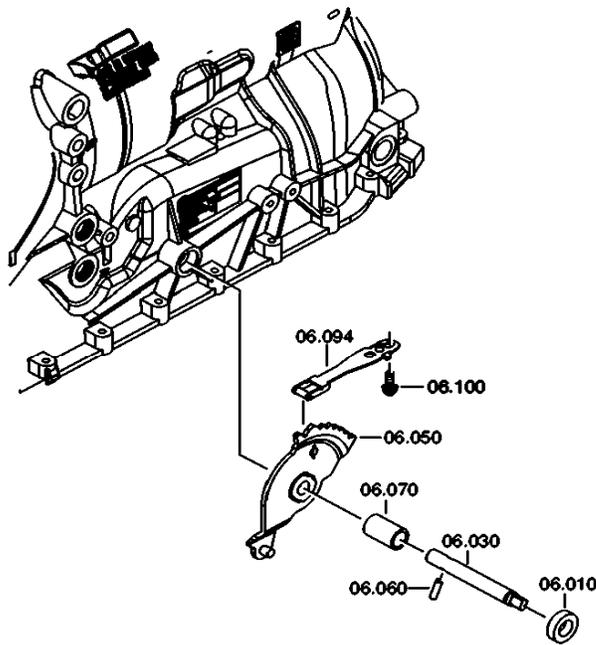




GEARSHIFT SYSTEM M-SHIFT GROUP LAND ROVER

Position #	Description	Quantity	Notes
06.010	SHAFT SEAL	2	10X18X5; Included in overhaul kit; see page 40.
06.030	SELECTOR SHAFT	1	
06.050	ROOSTER COMB	1	
06.060	CLAMPING SLEEVE	1	
06.070	PIPE	1	22.50 mm
06.094	DETENT SPRING	1	
06.100	TORX SCREW	2	M6X13

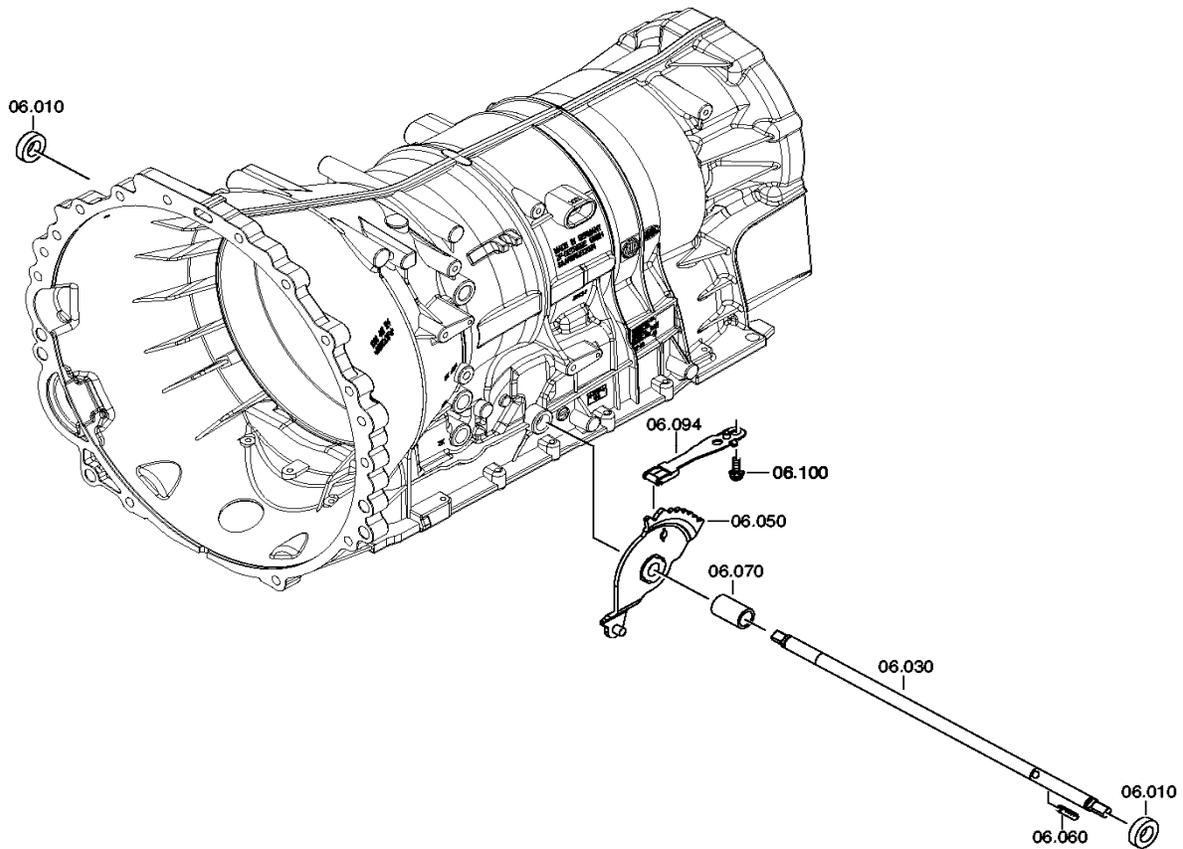

GEARSHIFT SYSTEM M-SHIFT GROUP Ford


Position #	Description	Quantity	Notes
06.010	SHAFT SEAL	1	10X18X5; Included in overhaul kit; see page 40.
06.030	SELECTOR SHAFT	1	
06.050	ROOSTER COMB	1	
06.060	CLAMPING SLEEVE	1	
06.070	PIPE	1	22.50 mm
06.094	DETENT SPRING	1	
06.100	TORX SCREW	2	M6X13

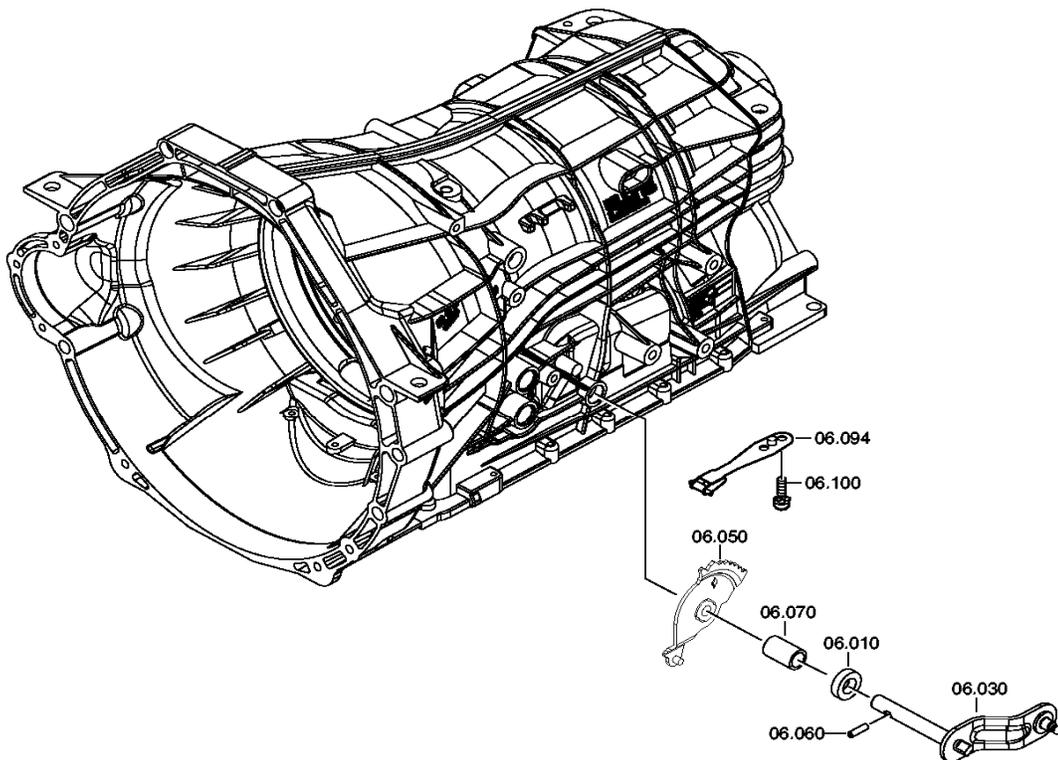



PARKING LOCK GROUP

Position #	Description	Quantity	Notes
24.010	PIN	1	
24.020	SCREW PLUG	1	Included in overhaul kit; see page 40.
24.040	PAWL	1	
24.060	LEG SPRING	1	
24.080	CONNECTING BAR	1	
24.110	GUIDING PLATE	1	
24.120	TORX SCREW	4	M6X20

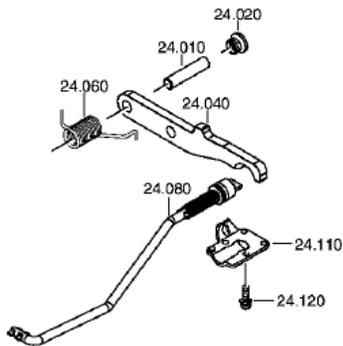



6HP26X 1068 020 XXX / 6HP28X 1068 050 XXX SELECTIVE SHIMS

6HP26X / 6HP28X SELECTIVE SHIM

Position #	Select. Parts	Description	Quantity		Notes
10.090	OIL SUPPLY SHIM				
	0730.009.529	SHIM	1	4.80	
	0730.009.528	SHIM	1	4.60	
	0730.009.527	SHIM	1	4.40	
	0730.009.526	SHIM	1	4.20	
	0730.009.525	SHIM	1	4.00	
	0730.009.524	SHIM	1	3.80	
	0730.009.523	SHIM	1	3.60	
	0730.009.522	SHIM	1	3.40	
	0730.009.521	SHIM	1	3.20	
	0730.009.520	SHIM	1	3.00	
	0730.009.519	SHIM	1	2.80	
0730.009.518	SHIM	1	2.60		

6HP26X / 6HP28X SELECTIVE SHIM

Position #	Select. Parts	Description	Quantity		Notes
14.050	OUTPUT SHIM				
	0730.009.771	SHIM	1	2.80	
	0730.009.770	SHIM	1	2.60	
	0730.009.769	SHIM	1	2.40	
	0730.009.768	SHIM	1	2.20	
	0730.009.767	SHIM	1	2.00	
	0730.009.766	SHIM	1	1.80	
	0730.009.765	SHIM	1	1.60	
	0730.009.764	SHIM	1	1.40	



6HP26X 1068 020 XXX / 6HP28X 1068 050 XXX SELECTIVE SNAP RINGS

6HP26X / 6HP28X SELECTIVE SNAP RING

Position #	Select. Parts	Description	Quantity	Notes
70.170	COUPLING A SNAP RING			
	0730.513.791	SNAP RING	1	4.60
	0730.513.790	SNAP RING	1	4.40
	0730.513.789	SNAP RING	1	4.20
	0730.513.788	SNAP RING	1	4.00
	0730.513.787	SNAP RING	1	3.80
	0730.513.786	SNAP RING	1	3.60
	0730.513.785	SNAP RING	1	3.40
	0730.513.784	SNAP RING	1	3.20
	0730.513.783	SNAP RING	1	3.00
	0730.513.782	SNAP RING	1	2.80
	0730.513.781	SNAP RING	1	2.60
	0730.513.780	SNAP RING	1	2.40
0730.513.779	SNAP RING	1	2.20	

6HP26X / 6HP28X SELECTIVE SNAP RING

Position #	Select. Parts	Description	Quantity	Notes
72.170	COUPLING B SNAP RING			
	0730.513.791	SNAP RING	1	4.60
	0730.513.790	SNAP RING	1	4.40
	0730.513.789	SNAP RING	1	4.20
	0730.513.788	SNAP RING	1	4.00
	0730.513.787	SNAP RING	1	3.80
	0730.513.786	SNAP RING	1	3.60
	0730.513.785	SNAP RING	1	3.40
	0730.513.784	SNAP RING	1	3.20
	0730.513.783	SNAP RING	1	3.00
	0730.513.782	SNAP RING	1	2.80
	0730.513.781	SNAP RING	1	2.60
	0730.513.780	SNAP RING	1	2.40
0730.513.779	SNAP RING	1	2.20	

6HP26X / 6HP28X SELECTIVE SNAP RING

Position #	Select. Parts	Description	Quantity	Notes
75.180	COUPLING C SNAP RING			
	0730.513.791	SNAP RING	1	4.60
	0730.513.790	SNAP RING	1	4.40
	0730.513.789	SNAP RING	1	4.20
	0730.513.788	SNAP RING	1	4.00
	0730.513.787	SNAP RING	1	3.80
	0730.513.786	SNAP RING	1	3.60
	0730.513.785	SNAP RING	1	3.40
	0730.513.784	SNAP RING	1	3.20
	0730.513.783	SNAP RING	1	3.00
	0730.513.782	SNAP RING	1	2.80
	0730.513.781	SNAP RING	1	2.60
	0730.513.780	SNAP RING	1	2.40
0730.513.779	SNAP RING	1	2.20	

For a distributor in your area call ZF at 1-800-451-2595 or visit our website at www.zf.com/na.



6HP26X 1068 020 XXX / 6HP28X 1068 050 XXX SELECTIVE SNAP RINGS

6HP26X / 6HP28X SELECTIVE SNAP RING

Position #	Select. Parts	Description	Quantity	Notes
71.180	COUPLING E SNAP RING			
	1058.370.017	SNAP RING	1	3.60
	1058.370.016	SNAP RING	1	3.40
	1058.370.015	SNAP RING	1	3.20
	1058.370.014	SNAP RING	1	3.00
	1058.370.013	SNAP RING	1	2.80
	1058.370.012	SNAP RING	1	2.60
	1058.370.011	SNAP RING	1	2.40
	1058.370.021	SNAP RING	1	2.20
	1058.370.024	SNAP RING	1	2.00
1058.370.023	SNAP RING	1	1.80	



Kits Content

6HP26X / 6HP28X Kits Content

6HP26X / 6HP28X Filter Kit (Plastic Oil Pan) – 1068 298 033

Position #	ZF Part #	Description	Quantity	Where used (1068 ____)	Notes
03.010	1068 298 033	Plastic Oil Pan incl.	1	All	
		Filter	1	All	
		Gasket	1	All	
		Round Sealing Ring	1	All	

6HP26X Friction Kit – 1068 298 034

Position #	ZF Part #	Description	Quantity	Where used (1068 ____)	Notes
70.150	1068 277 004	Friction Plate A	5	See Chart Below	
71.160	1068 271 018	Friction Plate E	7	See Chart Below	
72.150	1068 277 002	Friction Plate B	5	See Chart Below	
73.250	1068 277 004	Friction Plate D	7	See Chart Below	
75.120	1068 277 002	Friction Plate C	5	See Chart Below	

6HP26X 1068 020
002 to 004
011
014
018
020
027
029 to 030
033 to 038
043 to 047
051
054
057
064 to 066
076



Kits Content

6HP26X / 6HP28X Kits Content

6HP26X Friction Kit – 1068 298 035

Position #	ZF Part #	Description	Quantity	Where used (1068 ____)	Notes
70.150	1068 277 004	Friction Plate A	5	See Chart Below	
71.160	1068 271 080	Friction Plate E	6	See Chart Below	
72.150	1068 277 002	Friction Plate B	5	See Chart Below	
73.250	1068 277 004	Friction Plate D	7	See Chart Below	
75.120	1068 277 002	Friction Plate C	5	See Chart Below	

6HP26X 1068 020 ____
052 to 053
055
058 to 059
068 to 072
074 to 075
078

6HP26X / 6HP28X Friction Kit – 1068 298 036

Position #	ZF Part #	Description	Quantity	Where used (1068 ____)	Notes
70.150	1068 277 011	Friction Plate A	5	See Chart Below	
71.160	1068 271 080	Friction Plate E	7	See Chart Below	
72.150	1068 277 002	Friction Plate B	5	See Chart Below	
73.250	1068 277 011	Friction Plate D	7	See Chart Below	
75.120	1068 277 002	Friction Plate C	5	See Chart Below	

6HP26X 1068 020 ____	6HP28X 1068 050 ____
060 to 061	001 to 004
	007 to 015



Kits Content

6HP26X / 6HP28X Kits Content

6HP26X / 6HP28X Steel Kit – 1068 298 037

Position #	ZF Part #	Description	Quantity	Where used (1068 _____)	Notes
70.140	1068 377 020	Steel Plate A	6	See Chart Below	
71.150	1068 371 030	Steel Plate E	6	See Chart Below	
71.170	1068 371 069	End Plate E	1	See Chart Below	
72.140	1068 377 019	Steel Plate B	5	See Chart Below	
72.144	1068 372 043	End Plate B	1	See Chart Below	
73.240	1068 377 019	Steel Plate D	7	See Chart Below	
73.260	1068 377 026	End Plate D 4.2	1	See Chart Below	
73.260	1068 377 021	End Plate D 3.9	1	See Chart Below	
73.260	1068 377 025	End Plate D 3.6	1	See Chart Below	
73.260	1068 377 024	End Plate D 3.3	1	See Chart Below	
73.260	1068 377 020	End Plate D 3.0	1	See Chart Below	
73.260	1068 377 023	End Plate D 2.7	1	See Chart Below	
73.260	1068 377 022	End Plate D 2.4	1	See Chart Below	
73.260	1068 377 019	End Plate D 2.1	1	See Chart Below	
73.260	1068 377 029	End Plate D 1.8	1	See Chart Below	
75.140	1068 377 020	Steel Plate C	5	See Chart Below	
75.160	1068 377 021	End Plate C	1	See Chart Below	

6HP26X 1068 020 _____	6HP28X 1068 050 _____
002 to 004	003 to 004
011	008
014	010 to 011
018	014 to 015
020	
027	
029 to 030	
033 to 039	
043 to 047	
051 to 054	
057 to 061	
064 to 066	
068 to 069	
072	
074	
076	



Kits Content

6HP26X / 6HP28X Kits Content

6HP26X / 6HP28X Steel Kit – 1068 298 038

Position #	ZF Part #	Description	Quantity	Where used (1068 _____)	Notes
70.140	1068 377 020	Steel Plate A	6	See Chart Below	
71.150	1068 371 047	Steel Plate E	7	See Chart Below	
71.170	1068 371 069	End Plate E	1	See Chart Below	
72.140	1068 377 019	Steel Plate B	5	See Chart Below	
72.144	1068 372 043	End Plate B	1	See Chart Below	
73.240	1068 377 019	Steel Plate D	7	See Chart Below	
73.260	1068 377 026	End Plate D 4.2	1	See Chart Below	
73.260	1068 377 021	End Plate D 3.9	1	See Chart Below	
73.260	1068 377 025	End Plate D 3.6	1	See Chart Below	
73.260	1068 377 024	End Plate D 3.3	1	See Chart Below	
73.260	1068 377 020	End Plate D 3.0	1	See Chart Below	
73.260	1068 377 023	End Plate D 2.7	1	See Chart Below	
73.260	1068 377 022	End Plate D 2.4	1	See Chart Below	
73.260	1068 377 019	End Plate D 2.1	1	See Chart Below	
73.260	1068 377 029	End Plate D 1.8	1	See Chart Below	
75.140	1068 377 020	Steel Plate C	5	See Chart Below	
75.160	1068 377 021	End Plate C	1	See Chart Below	

6HP26X 1068 020 _____	6HP28X 1068 050 _____
055	001 to 002
070 to 071	007
075	009
078	012 to 013



Kits Content

6HP26X / 6HP28X Kits Content

6HP26X / 6HP28X Overhaul Kit – 1068 298 030

Position #	ZF Part #	Description	Quantity	Where used		Notes
				1068 020	1068 050	
01.050	0734 317 370	Sealing Sleeve	2	All		Gearbox housing
01.060	0734 317 371	Sealing Sleeve	1	All		Gearbox housing
01.064	0734 317 372	Sealing Sleeve	1	All		Gearbox housing
01.100	0501 321 921	Screw Plug	1	All		Gearbox housing
01.220	0501 321 922	Plug	1	All		Gearbox housing
10.010/170	0750 111 436	Shaft Seal	1	Ford		Oil supply
10.010/170	0734 319 695	Shaft Seal	1	All except Ford		Oil supply
10.020	0734 313 083	Round Sealing Ring	1	All		Oil supply
10.040/160	0734 401 291	Piston Ring	1	All		Oil supply
10.040/170	0734 401 295	Piston Ring	1	All		Oil supply
10.070	0734 313 064	Round Sealing Ring	1	All		Oil supply
10.084	0750 112 076	Usit Ring	14	All		Oil supply
70.040	0734 313 146	Round Sealing Ring	1	As needed		Coupling A
70.040	0501 320 476	Profiled Seal Ring	1	As needed		Coupling A
70.050	0734 313 028	Round Sealing Ring	1	As needed		Coupling A
70.090	0734 313 180	Round Sealing Ring	1	As needed		Coupling A
70.090	0501 320 477	Profiled Seal Ring	1	As needed		Coupling A
72.050	0734 313 147	Round Sealing Ring	1	All		Coupling B
72.060	1043 317 001	Round Sealing Ring	1	All		Coupling B
72.100	0734 313 147	Round Sealing Ring	1	All		Coupling B
72.200	0734 317 386	Sealing Ring	2	All		Coupling B
75.040	0734 313 180	Round Sealing Ring	1	All		Coupling C
75.040	0501 322 212	Lipped Sealing Ring	1	6HP28X		Coupling C
75.050	0734 313 783	Round Sealing Ring	1	All		Coupling C
75.050	0501 322 213	Lipped Sealing Ring	1	6HP28X		Coupling C
73.020	0734 313 146	Round Sealing Ring	1	6HP28X		Coupling D
73.020	0501 322 211	Lipped Sealing Ring	1	6HP28X		Coupling D
73.030	0734 313 029	Round Sealing Ring	1	All		Coupling D
73.070	0734 313 008	Round Sealing Ring	1	All		Coupling D
73.080	0734 313 033	Round Sealing Ring	1	All		Coupling D
73.080	0734 313 033	Round Sealing Ring	1	6HP28X		Coupling D
71.030	0734 313 007	Round Sealing Ring	1	All		Coupling E
71.040	0734 313 148	Round Sealing Ring	1	All		Coupling E
71.090	0734 313 040	Round Sealing Ring	1	All		Coupling E
71.190	0734 317 256	Piston Ring	3	As needed		Coupling E
71.190	0734 317 392	Sealing Ring	3	As needed		Coupling E
14.110	0734 319 633	Shaft Seal	1	All		Output
14.110	0750 111 470	Shaft Seal	1	All		Output

Continued on next page.



Kits Content

6HP26X / 6HP28X Kits Content

6HP26X / 6HP28X Overhaul Kit – 1068 298 030

Position #	ZF Part #	Description	Quantity	Where used		Notes
				1068 020 ___	1068 050 ___	
03.010/014	0501 323 155	Oil Pan Gasket	1	All		Filter
03.010/020	0501 319 012	Round Sealing Ring	1	All		Filter
03.010/030	0501 318 960	Screw Plug	1	All		Filter
03.010/120	0734 313 176	Round Sealing Ring	1	All		Filter
03.010/130	0501 321 921	Screw Plug	1	All		Filter
03.010/130	0501 321 921	Screw Plug	1	All		Filter
03.030/020	0501 320 086	Sealing Ring	1	All		Filter
03.050	1068 303 017	Gasket	1	All		Filter
27.460/020	0501 321 776	Gasket	2	All		Mechatronic
27.460/030	0501 321 777	Gasket	2	All		Mechatronic
27.520	0501 216 272	Guide Sleeve	1	All		Mechatronic
06.010	0734 319 801	Shaft Seal	2	All		Gearshift system
24.020	0501 214 941	Screw Plug	1	All		Parking lock

Kits may contain items not used in all applications.